


## Basic Call Features

## Placing a Call


## Using the handset:

1. Pick up the handset.
2. Enter the number, and then press the **Send** soft key.

## Using the speakerphone:

1. With the handset on-hook, press .
2. Enter the number, and then press the **Send** soft key.

## Using the headset:

1. With the headset connected, press  to activate the headset mode.
2. Enter the number, and then press the **Send** soft key.

Note: During a call, you can alternate between the headset, hands-free speakerphone and handset modes by pressing the **Headset** key, the **Speakerphone** key or by picking up the handset. Headset mode requires a connected headset.

## Answering a Call

## Using the handset:

Pick up the handset.

## Using the speakerphone:

Press .

## Using the headset:

Press .


Note: You can reject an incoming call by pressing the **Reject** soft key.

## Ending a Call

## Using the handset:

Hang up the handset or press the **EndCall** soft key.



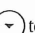


## Using the speakerphone:

Press  or the **EndCall** soft key.



## Using the headset:

Press the **EndCall** soft key.

## Redial

- Press  to enter the placed call list, press  or  to select the desired entry, and then press  or the **Send** soft key.
- Press  twice when the phone is idle to dial out the last dialed number.

## Call Mute and Un-mute

- Press  to mute the microphone during a call.
- Press  again to un-mute the call.



## Call Hold and Resume

## To place a call on hold:

Press the **Hold** soft key during an active call.

## To resume the call, do one of the following:

- If there is only one call on hold, press the **Resume** soft key.

- If there is more than one call on hold, press  or  to select the desired call, and then press the **Resume** soft key.


## Call Transfer

You can transfer a call in the following ways:

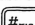
## Blind Transfer

1. Press the **Tran** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to.
3. Press the **Tran** soft key.

## Semi-Attended Transfer

1. Press the **Tran** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press .
3. Press the **Tran** soft key when you hear the ring-back tone.

## Attended Transfer

1. Press the **Tran** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press .
3. Press the **Tran** soft key when the second party answers.

## Call Forward

## To enable call forward:

1. Press **\*72**
2. Select the desired forward type:  
**4=INTERNET**—Incoming calls are forwarded **TO EXTENSION** **226 #**  
**5=EXTERNAL**—Incoming calls are forwarded **TO THE PHONE NUMBER OF YOUR CHOICE.**

◆ FINISH WITH #

DISABLE: \*73

## Call Conference

1. Press the **Conference** soft key during an active call. The call is placed on hold.
2. Enter the number of the second party, and then press the **Send** soft key.
3. Press the **Conference** soft key again when the second party answers. All parties are now joined in the conference.
4. Press the **EndCall** soft key to disconnect all parties.

Note: You can split the conference call into two individual calls by pressing the **Split** soft key.

## Speed Dial

## To configure a speed dial key:

1. Press the **Menu** soft key when the phone is idle, and then select **Features->DSS Keys**.
2. Select the desired DSS key, and then press the **Enter** soft key.
3. Select **Speed Dial** from the **Type** field, select the desired line from the **Account ID** field, enter a label in the **Label** field and then enter the number in the **Value** field.
4. Press the **Save** soft key to accept the change.

## To use the speed dial key:

Press the speed dial key to dial out the preset number.

MESSAGING: \*98 + Code